


Spring ATS/442

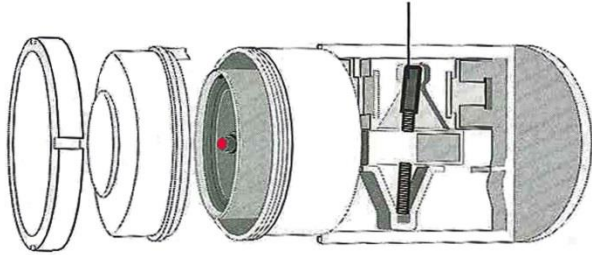


Refer to Maintenance Guide for Fitting Instructions

Retaining Clips


Cover

Primary Filter  
ATS/444

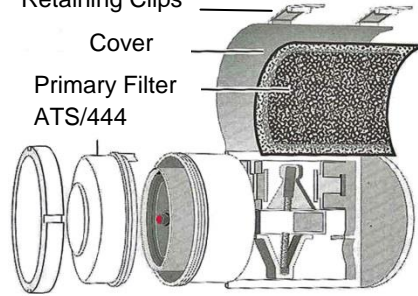

Refer to Maintenance Guide for Fitting Instructions


Diaphragm Assembly ATS/443 (with Pre-Greased Shaft)

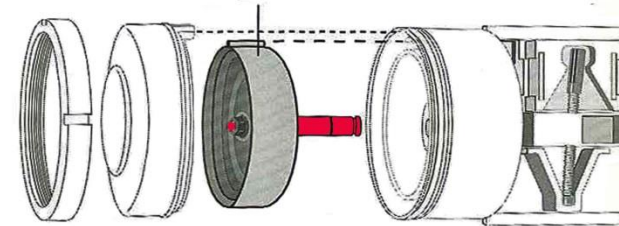

Refer to Maintenance Guide for Fitting Instructions

ATS7562E (05/12/17)

Spring ATS/442

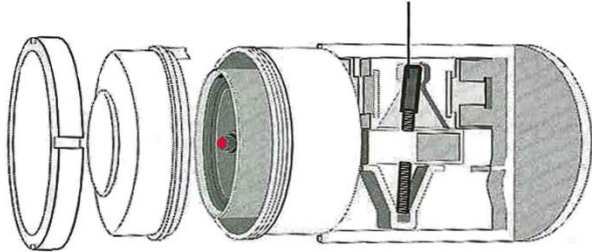


Refer to Maintenance Guide for Fitting Instructions

Retaining Clips


Cover

Primary Filter  
ATS/444

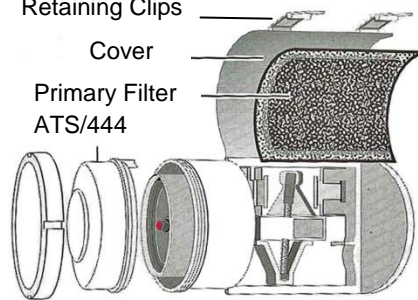

Refer to Maintenance Guide for Fitting Instructions


Diaphragm Assembly ATS/443 (with Pre-Greased Shaft)

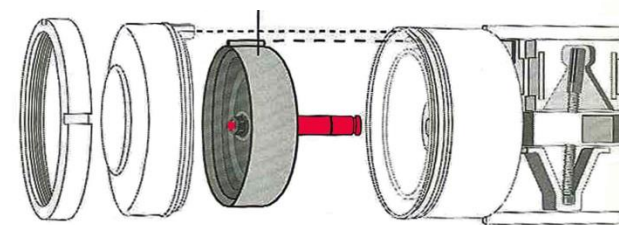

Refer to Maintenance Guide for Fitting Instructions

ATS7562E (05/12/17)

Spring ATS/442

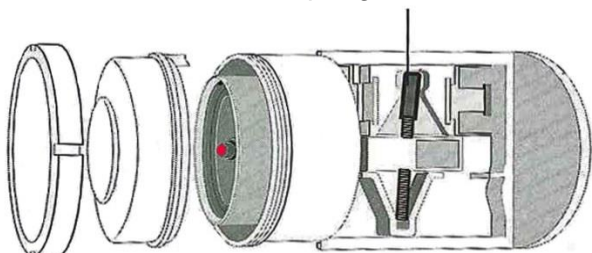


Refer to Maintenance Guide for Fitting Instructions

Retaining Clips


Cover

Primary Filter  
ATS/444

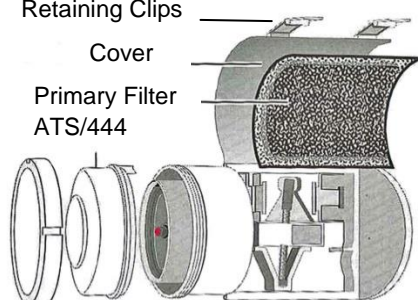

Refer to Maintenance Guide for Fitting Instructions

Diaphragm Assembly ATS/443 (with Pre-Greased Shaft)

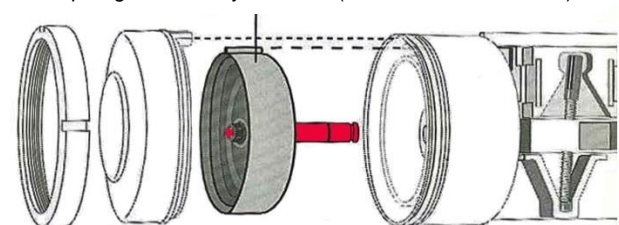

Refer to Maintenance Guide for Fitting Instructions

ATS7562E (05/12/17)