


Operating Instructions: OptiRange Valve Replacement (AOR/405)

- 1) Remove screws from gun body. Take care to note the positions of the screws removed as there are 3 different sizes:

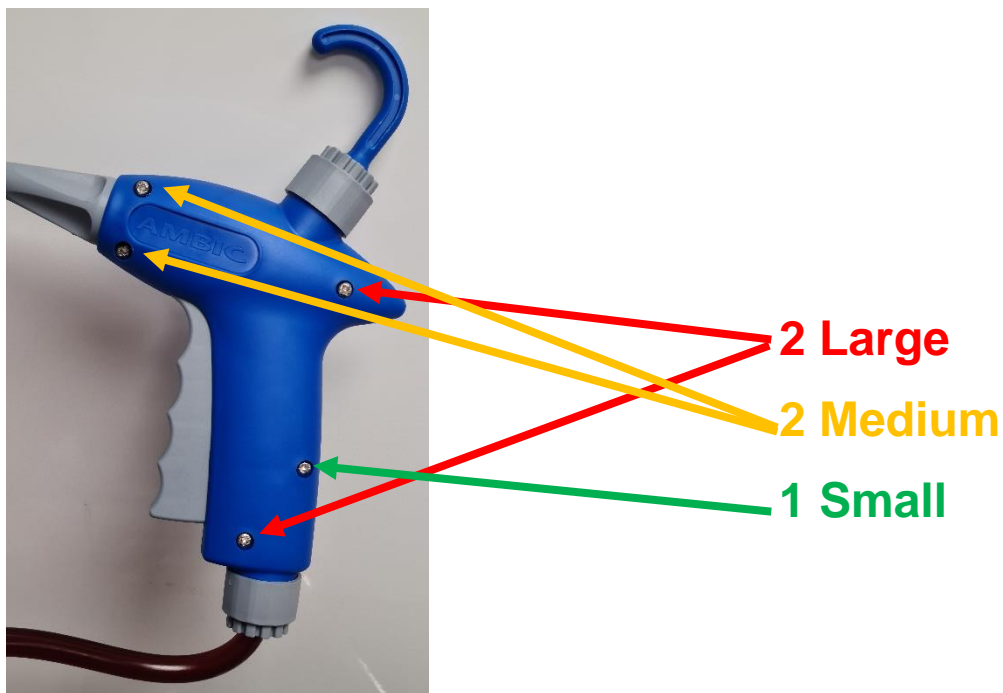

- 2) Check valve replacement is correct for style of gun:



Bottom Load Valve



Top Load Valve

3) Remove old valve assembly and replace with new one, as shown:



Bottom Load Gun



Top Load Gun

4) Replace screws, ensuring screws are replaced in the correct positions, and tighten to close gun body:

