

AMBIC®

High Volume DC Peristaltic Pump - Fixed Speed



OPERATING INSTRUCTIONS

leading best practice in livestock health management

Introduction

The High Volume Peristaltic Pump is supplied as stand-alone pump. Pumps are supplied as either of two voltages: 12 & 24 V DC. The delivery output will be dependent upon the motor speed and the size of the tube size that is fitted to the pump, as well as the viscosity of the liquid being pumped. Five different speed motors and two tubes sizes (9.6 and 12.7mm Bore Santoprene) are available.

This pump is ideal for intermittent use.

Safety



CAUTION: *Wear protective clothing and eyewear when dispensing chemicals or any other materials. Observe safety handling instructions (MSDS) of chemical manufacturers.*




CAUTION: *To avoid severe or fatal shock, always disconnect main power when servicing the unit.*

Specifications

Pump delivery – These are **nominal** figures using Water at room temperature with a one metre suction and delivery tube:

Pump Speed (rpm)	Delivery Rate 9.6 Bore ml / min	Delivery Rate 12.7 Bore ml / min
62	1500	2400
94	2300	4300
125	3400	5400
156	3700	6200
188	4800	7100

Ambic Equipment Ltd – High Volume Peristaltic Pump (12/24V DC) Operating Notes

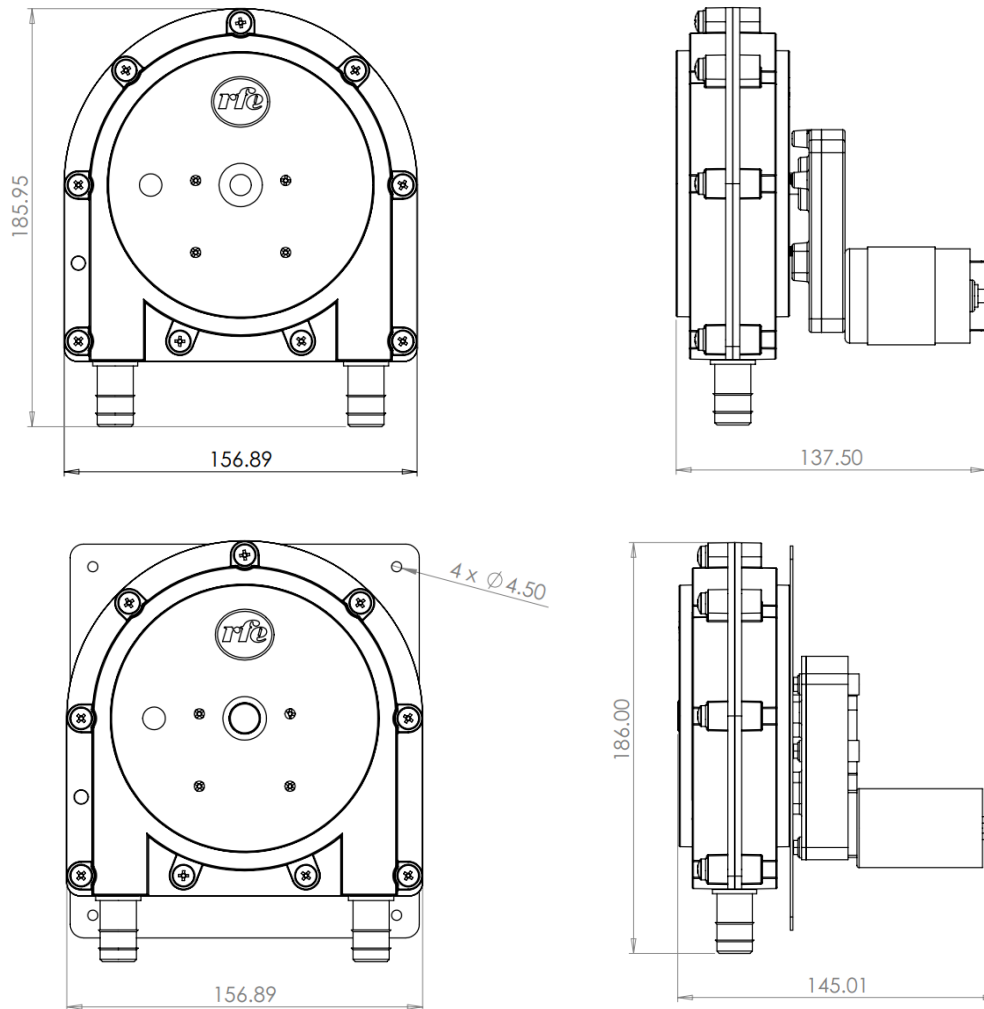

Installation

Pump

The pump will turn clockwise during operation. Liquid intake (suction) is on the left-hand spigot and delivery (feed) is on the right-hand spigot. Ensure that the correct sized suction and delivery tubes are used. Secure the suction and feed tube with Jubilee clips.

Mounting

The pump is designed to be fitted to a suitable plastic, or metal enclosure with the correct cut out. If the pump is fitted with a mounting plate, fixing holes are provided for M4 screws.

Power

12/24V DC, with minimum of 6A start up current, is required. The pump should be connected to the supply voltage via a terminal block or push-on crimps, as per your requirements. Any loose wires inside the enclosure should be clamped to the solid surface.

Operation

The pump will run in response to application of a 12/24V DC supply and stop on removal of the supply. There are no other controls.

Troubleshooting

Fault	Cause	Remedy
Pump does not work	<p>Pump is not connected to the supply.</p> <p>The supply is Switched OFF.</p> <p>Pump is drawing current but not running.</p>	<p>Check that pump is connected to supply voltage.</p> <p>Switch the supply ON.</p> <p>Check the power supply is capable of supplying the required current.</p>
No pump output delivery	<p>Pump is not running.</p> <p>Spinner assembly is running anticlockwise.</p> <p>Inlet tube is not connected to the left-hand spigot.</p> <p>Suction tube assembly is not properly inserted into chemical drum – use a suitable Non return valve.</p> <p>Stiffener not fitted to the suction tube.</p> <p>Kinks in the suction and/or delivery tube.</p>	<p>Connect the power to the pump.</p> <p>Reverse the supply connections.</p> <p>Connect the inlet (suction) tube to the left-hand spigot.</p> <p>Insert the suction tube into the drum.</p> <p>Fit a stiffener tube; this will help with keeping the suction tube to the bottom of the drum.</p> <p>Remove the kink and make sure it does not happen in the same place again.</p>
Pump does not lift the liquid	<p>Peristaltic tube needs replacing.</p>	<p>Replace the tube with correct size bore, spigot and shore hardness as supplied through the manufacturer or their recognized agent.</p>
Chemical seems to be lift and then dropping back.	<p>Peristaltic tube needs replacing.</p> <p>Air getting inside the tube.</p>	<p>Replace the tube with correct size bore, spigot and shore hardness, as supplied through the manufacturer or their recognized agent.</p> <p>Check if the suction and delivery tubes are fitted tightly onto the spigot and that a jubilee clip has been fitted.</p>

Parts Listing

The following spare parts are available to order separately:

<p>AHP/100-SA-12 AHP/100-SA-12-1/2 12.7mm Bore Tube</p>  <p>Available with 5/8" or 1/2" spigots</p>	<p>AHP/100-SA-09 AHP/100-SA-09-1/2 9.6mm Bore Tube</p>  <p>Available with 5/8" or 1/2" spigots</p>
<p>AHP/103 Pump Block and Cover</p> 	<p>AHP/102-FP Roller Assembly</p> 
<p>ALP/115 Silicone Grease</p> 	<p>See website (ambic.co.uk) for part code DC Motor</p>  <p>Five different motor speeds.</p>

Pump Maintenance

The peristaltic pump tube should be checked regularly for wear. It should also be kept clean and lubricated with silicone grease. We also recommend that the tube is changed at regular intervals, depending upon how long the pump has been in use and the type of fluid being pumped through it.

The information in this leaflet is for general information and guidance only. Ambic Equipment Ltd does not provide any warranty on the application of Pumps or Pump Assemblies. It is recommended that customers carry out life tests for their particular application to determine suitability prior to use. The information provided is given in good faith and believed to be current and correct at the time of publication. Ambic Equipment Ltd cannot accept responsibility for any errors or omissions contained in this document.



Ambic Equipment Limited,
1 Parkside, Avenue Two, Station Lane,
Witney, Oxfordshire, OX28 4YF. England
Tel: +44 (0)1993 776555 Fax: +44 (0)1993 779039
www.ambic.co.uk